


EUORACK MODULE



PROTIS 1 EUORACK MODULE BOARD USER MANUAL

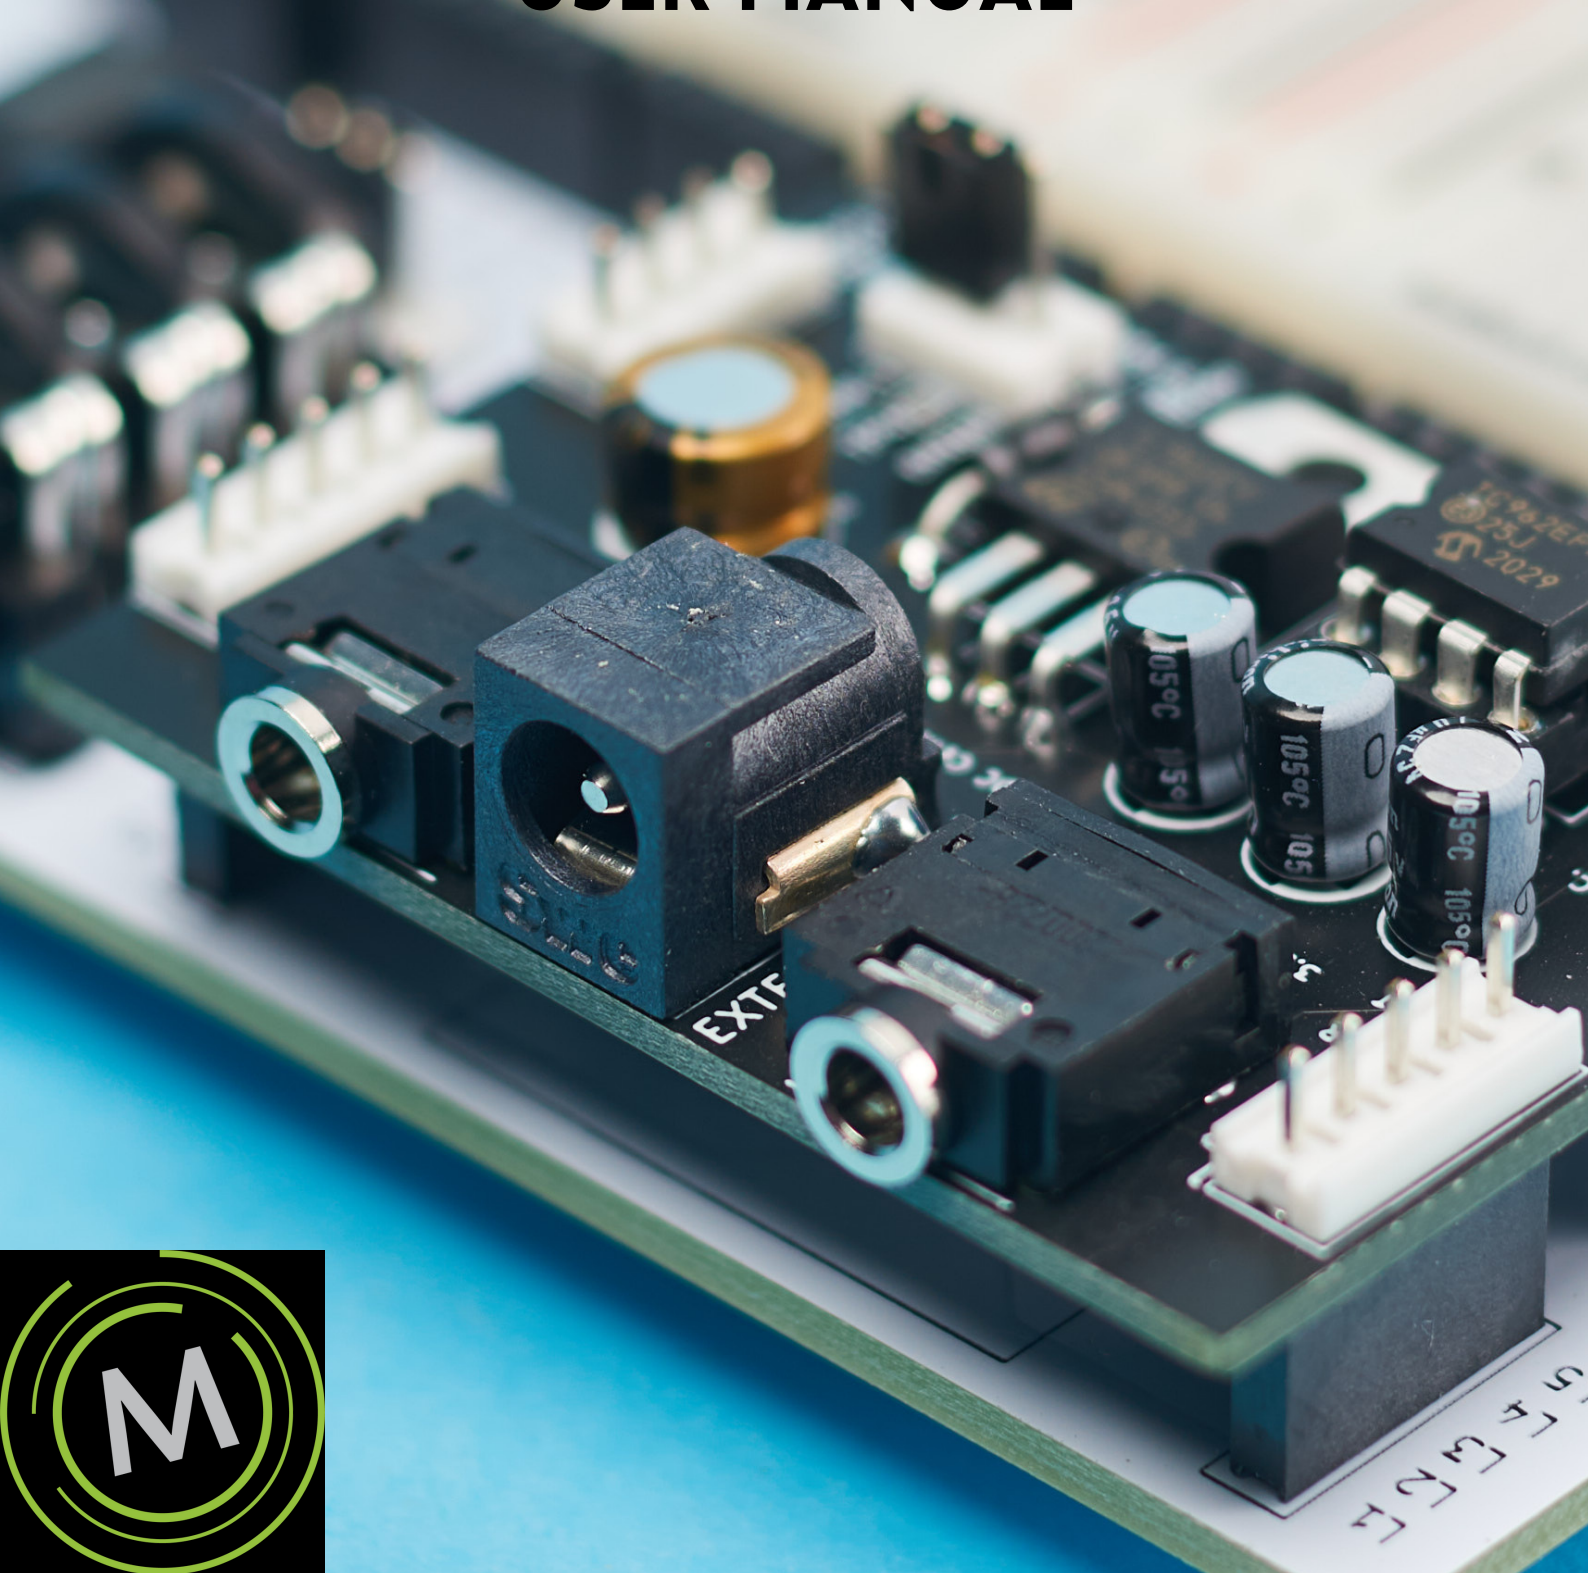

COMMON EUORACK FEATURES

POWER

15V Split Power Supply

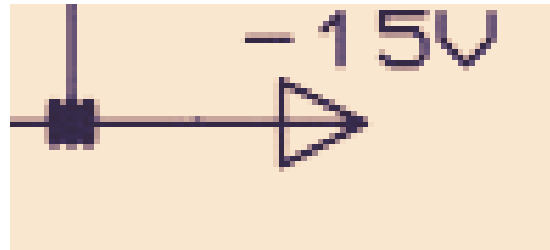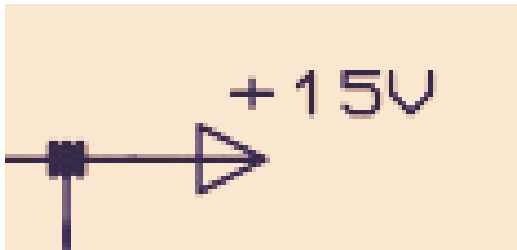


CONNECTION

3.5mm Jacks




POWERING THE MODULE

1 +18VDC from PROTIS 1

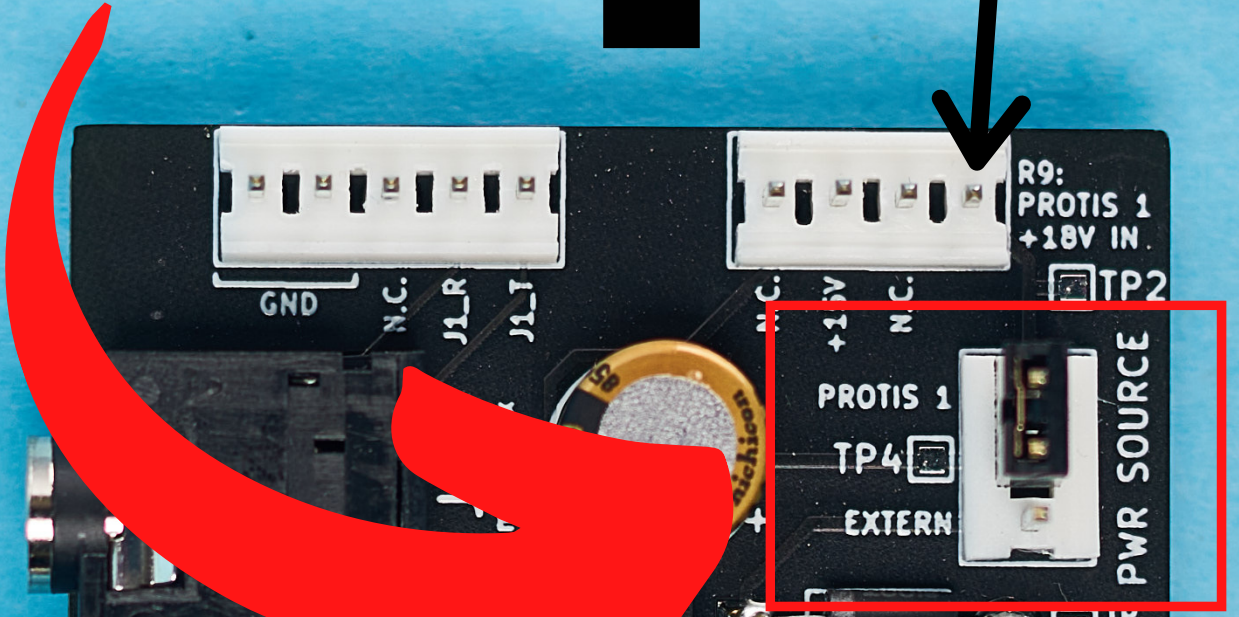

2 EXTERNAL +18VDC

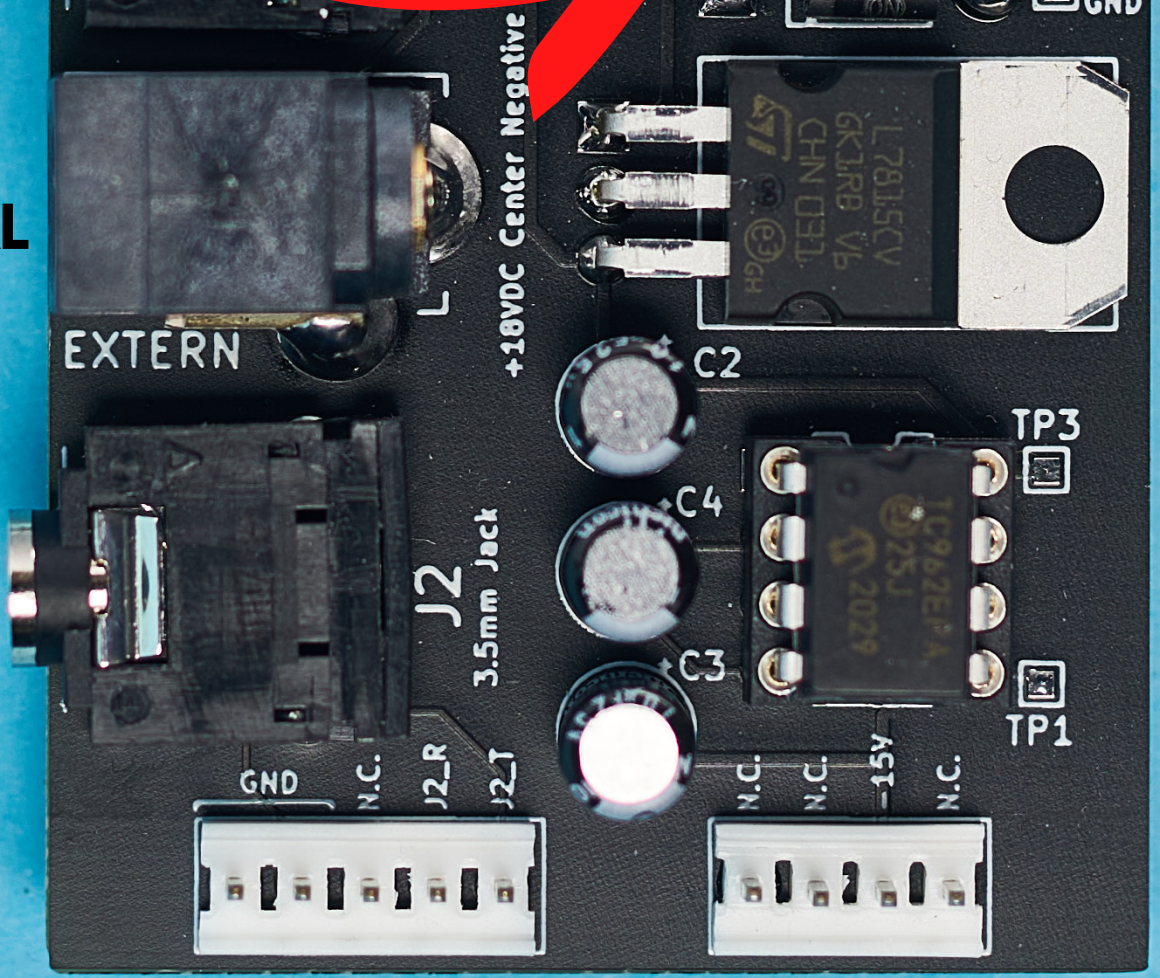

15VDC POWER


+15VDC




GND



R9: PROTIS 1 +18V IN TP2

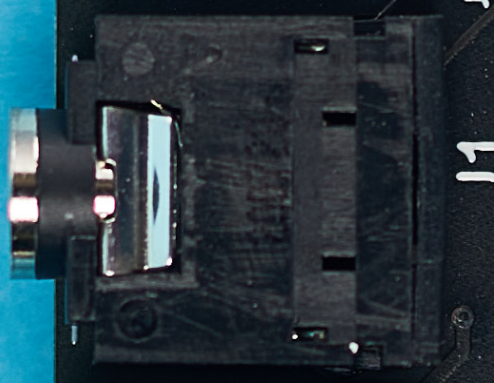

J1 3.5mm Jack

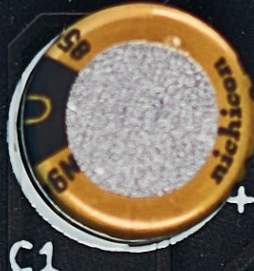

C1

PROTIS 1 TP4 EXTERN



PWR SOURCE



TP GND



EXTERN


+18VDC Center Negative



L7815CV
GK3R0 V6
CHN DEL
H9 6H



C2

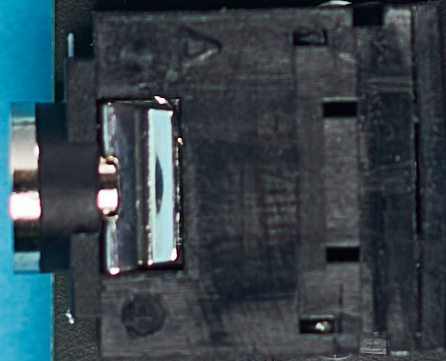


J2 3.5mm Jack



C4



C3

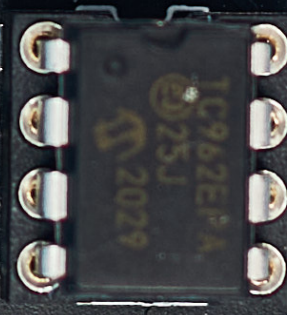


TP2222PA
Q253
Q2029

TP3

TP1

GND

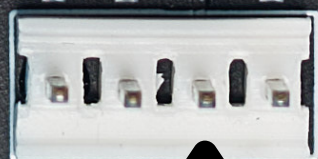


-15VDC



3.5MM JACKS

Ground Connections

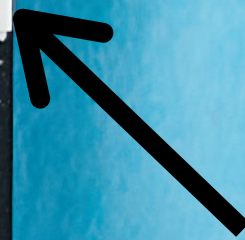

**Jack Ring
&
Jack Tip
Connections**

***CONNECTIONS
MIRRORED FOR JACK 2**

